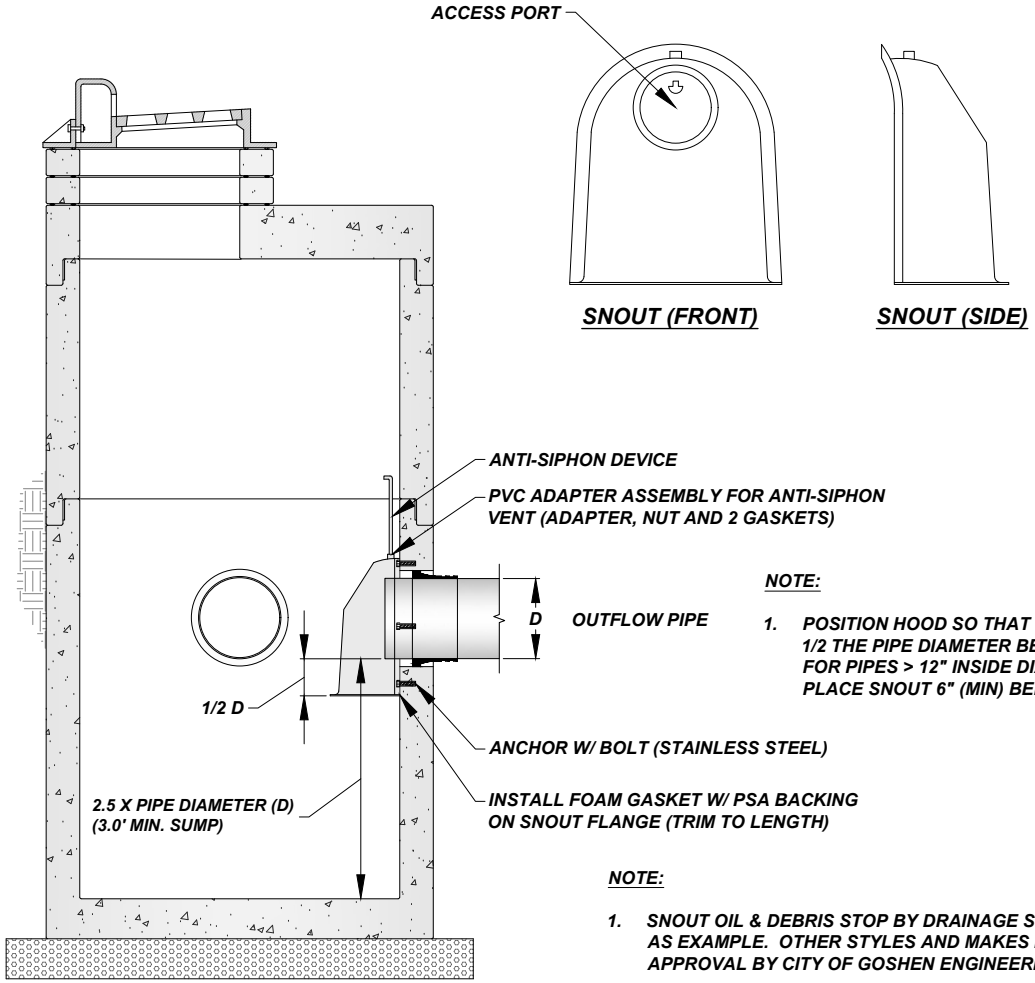

SNOUT (FRONT)

SNOUT (SIDE)

NOTE:

1. POSITION HOOD SO THAT BOTTOM FLANGE OF SNOUT IS 1/2 THE PIPE DIAMETER BELOW THE BOTTOM OF THE PIPE FOR PIPES > 12" INSIDE DIA. FOR PIPES < 10" INSIDE DIA. PLACE SNOUT 6" (MIN) BELOW BOTTOM OF PIPE

NOTE:

1. SNOUT OIL & DEBRIS STOP BY DRAINAGE SOLUTIONS, INC. SHOWN AS EXAMPLE. OTHER STYLES AND MAKES MAY BE USED WITH APPROVAL BY CITY OF GOSHEN ENGINEERING DEPARTMENT

SEWER HOOD/SNOUT

NOT TO SCALE